


# InterLink Connections

Individual External GPS Antennas  
Share a WeatherSense

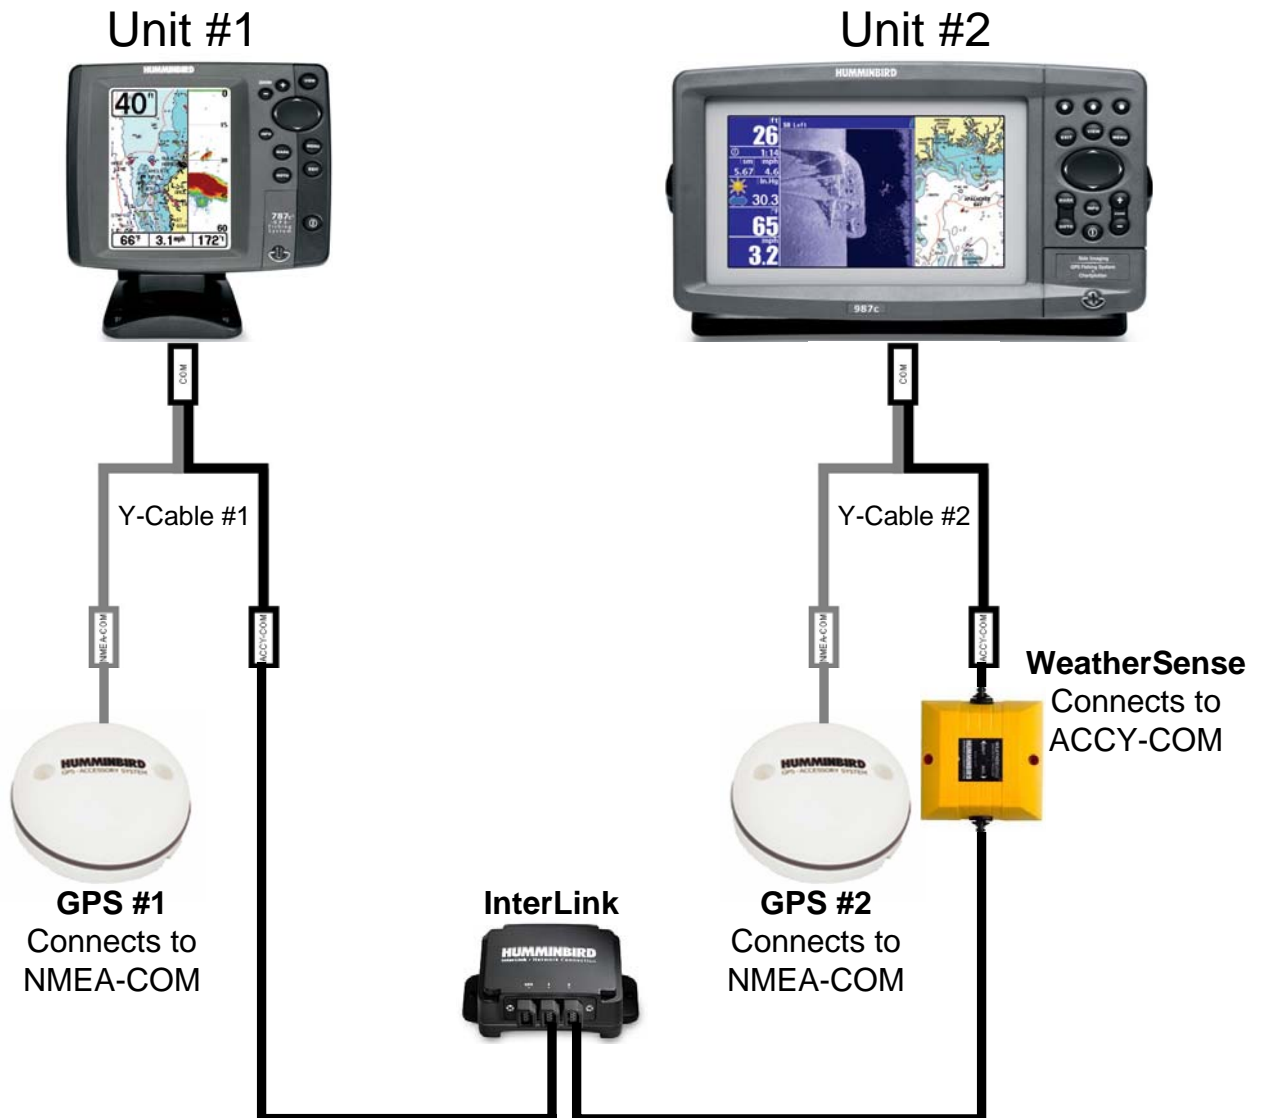

- Connect ACCY-COM from Y-Cable #1 to connector 1 on the InterLink.
- Connect WeatherSense to connector 2 on the InterLink.
- No connection is made to the GPS connection on the InterLink.

**NOTE:** Accessories connected to one unit can only be shared through the InterLink when that unit is powered on.