

NMEA Data to Computer Connection

Using AS-PC Computer Connection Cable and NMEA 'Pigtail' Connection from GPS Receiver


Prep the PC Connect cable by removing the NMEA-COM Male Connector and stripping the Black/Bare and White wires.

Prep the NMEA 'Pigtail' wire by removing the black plastic cap.

Connections are simple:

1. Connect the Black/Bare wires from each cable together.
2. Connect the White wires from each cable together.

NOTE: The Green and Red wires from these cables are not used and so need to be terminated in such a way that they make no electrical contact with anything else.

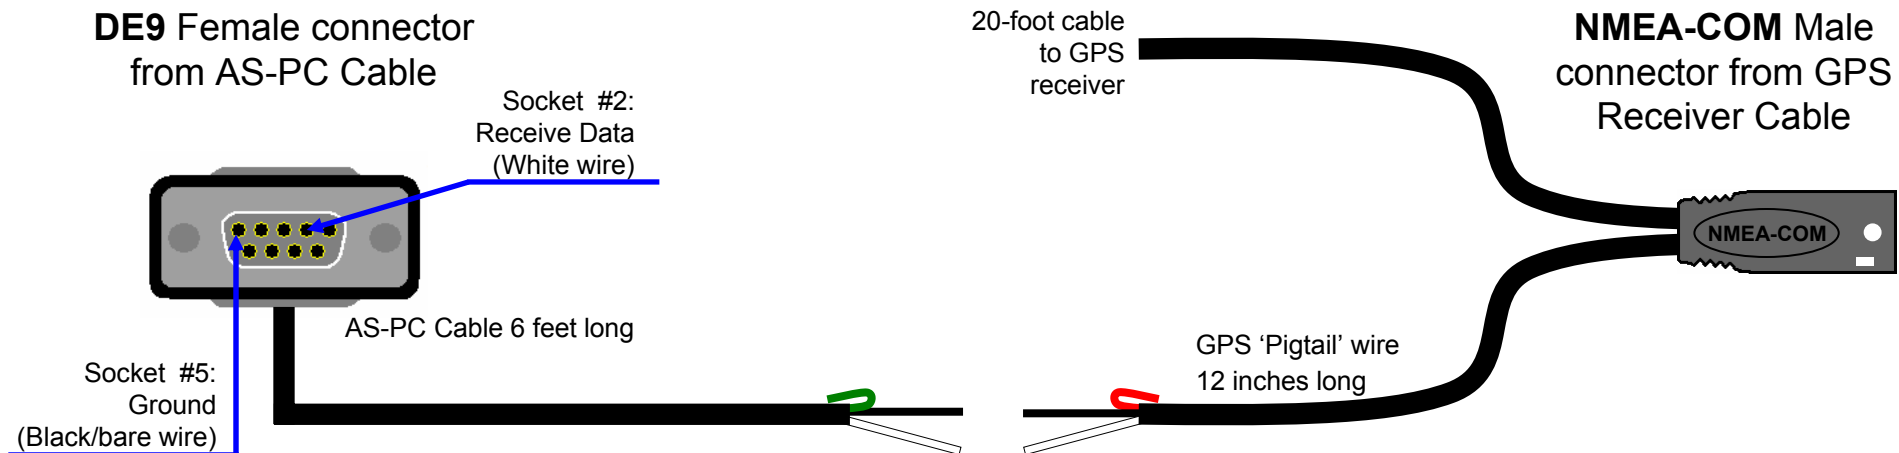

Note: 24 gage stranded copper wire may be used to extend the cable length if needed. It will need to be wired in between the DE-9 connector cable and the GPS receiver's 'pigtail' connection.